

iSound[®]
by *dreamGEAR[®]*

www.dreamgear.net
www.isound.net

iSound[®] The New Sound

CONCERT TO GO Instruction Manual



Specifications:

- 36 Watts of power
- AM/FM alarm clock radio
- Wake-me-to-music feature
- Wireless remote control
- Dock connector for iPod syncing and charging
- Battery or AC powered
- Treble and bass control
- Video output
- Compatible with all audio devices with standard headphone output



User Guide:

Before setting up the Concert to Go, confirm that the following items are included in the box.

- iPod speaker system
- AC/DC power supply
- Wireless remote
- iPod brackets
- USB cable
- FM antenna
- AM antenna
- Video cable
- 3.5mm audio cable

Speaker Controls:

- A. Down arrow
- B. Up arrow
- C. Volume down
- D. Volume up
- E. Power
- F. Alarm
- G. Time
- H. Function
- I. Video out
- J. FM antenna-in
- K. AC/DC adapter in
- L. AM loop-in
- M. AUX-in
- N. USB Jack

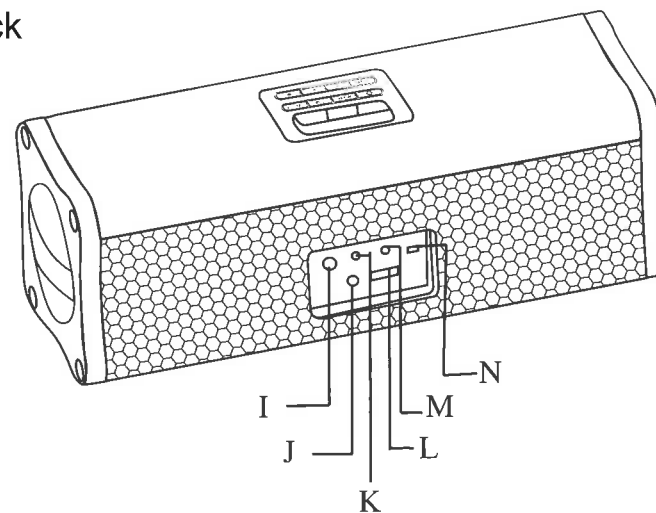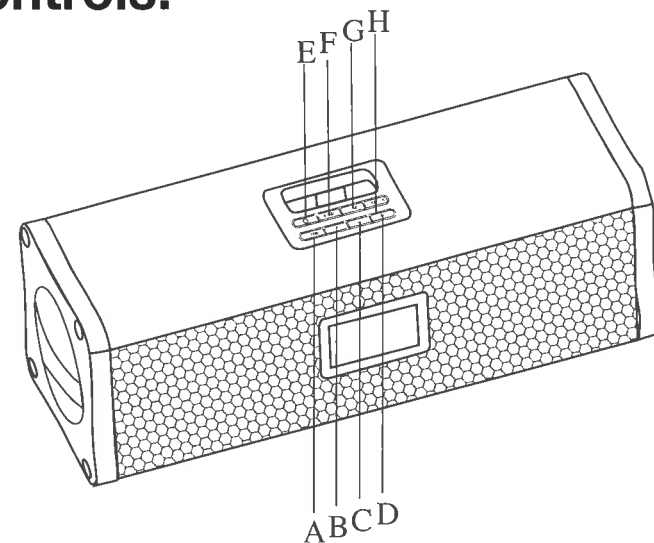

Getting Started:


1. Plug one end of the AC/DC adaptor into the speakers power input and the other end into a wall outlet.
2. Press the POWER button.
3. Place the proper iPod bracket onto the Concert to Go's docking area.
4. Place your iPod onto the dock, your iPod will begin to charge automatically.
5. The Concert to Go also has the option to synchronize with your computer. To use the synchronization function, connect the (included) USB cable to the USB input on the the rear of the speaker and connect the other end to your computers USB port.

Time Setting:

1. Press and hold the time button for 3 seconds, the hour setting will begin flashing, press the UP or DOWN button to adjust the hours to the correct time. Press the TIME button again, the minutes will begin flashing, press the UP or DOWN button to adjust the minutes to the correct time. Press the TIME button again, the unit will exit time setting mode.

Battery Power:

The Concert to Go can also be powered by batteries for music on the go. Only use batteries when there is not a power outlet accessible.

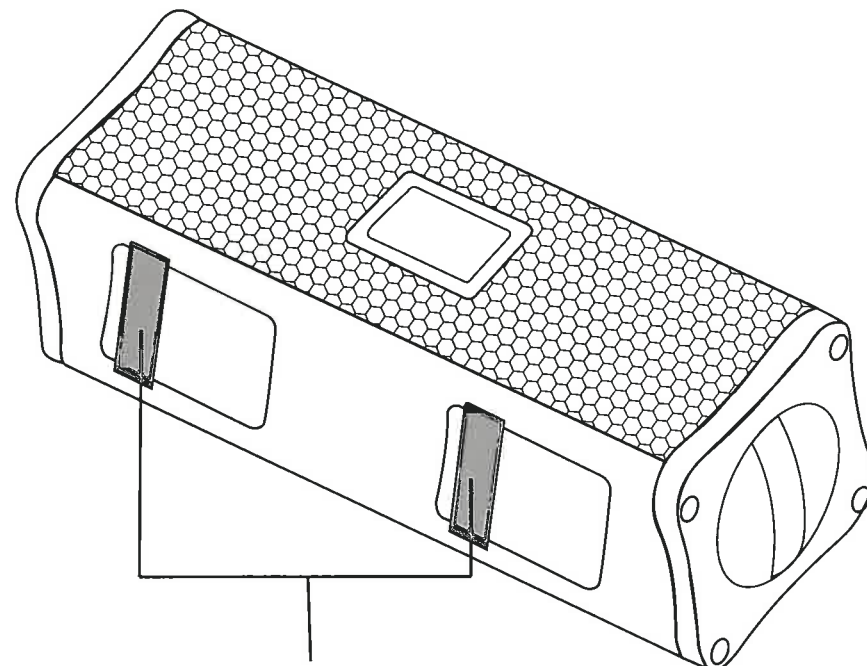

Battery
Compartments

Battery Installation:

1. Remove the two battery lids and install 6 "C" batteries into each compartment for a total of 12 "C" batteries.

Remote Control Functions:

The Concert to Go includes a wireless remote control that is designed to provide you with nearly every possible iPod function right at your finger tips.



STANDBY : Power on /off

MUTE : Mute

TIME: Time setting

AL MODE: Choose alarm clock mode

ALARM: Alarm clock time setting and on/off

TRE/BASS: Tre/bass adjustment

SLEEP: Timer 15/30/45/60/75/90/120

Function: Audio sources select

MENU: To go back to MENU Function

MEMORY: Radio channel auto-search and save

ENTER: Go to function you choose

Snooze: Snooze

VOL- : To turn the volume down

VOL+: To turn the volume Up

▲ : Up

▼ : Down

⏮ : Prev

⏭ : Next

▶|| : Play/pause

Alarm Mode Setting:

1. Press the ALARM button, the HOUR setting will begin to flash, use the UP and DOWN buttons to adjust the HOUR setting. Press the ALARM button again, the MINUTES will begin to flash, use the UP and DOWN buttons to adjust the MINUTES setting. Press the ALARM button again and the LCD will display "ON" which tells you the ALARM is set. Use the UP or DOWN button to turn the ALARM "OFF". Press the ALARM button again to exit the ALARM mode.

2. The Concert to Go has 3 options for ALARM sounds.

Option 1: Wake to the music on your iPod (note: this function will only work with a docked iPod.)

Option 2: Wake to the music on the radio.

Option 3: Wake to the speakers built-in music.

To choose a wake-to ALARM setting

Put the speaker in stand-by mode by pressing the power button. Press the FUNCTION button to cycle through the different ALARM wake-up modes.

The ALARM modes will cycle from radio, music, and iPod.

Radio → Clock sound → iPod

LCD display will show: Radio → 🎵 → iPod

Connecting Audio Devices:

1. Use the audio input to connect non-docking iPods or any other audio device with a standard headphone input. When using the audio input, press the FUNCTION button until the speaker is in AUX mode.
2. Press the FUNCTION button to switch between connected devices as well as the built-in radio.


iPOD → Aux → AM Radio → FM Radio

LCD display will show: IPOD → AUX → AM Radio → FM Radio

Connecting to a Video Display:

1. The Concert to Go can be connected to any TV/VIDEO display with a VIDEO input. Connect the Concert to Go to your VIDEO display using the included (video cable). Set your iPod to TV out in the video settings of the iPod, and switch your VIDEO display to the corresponding VIDEO input for which the Concert to Go is connected. (example: if the Concert to Go is connected to Video input 1, switch your Video display to Video 1. Video will be displayed on the VIDEO screen and audio will be heard through the Concert to Go.

note: video function only works with video/photo compatible iPods®

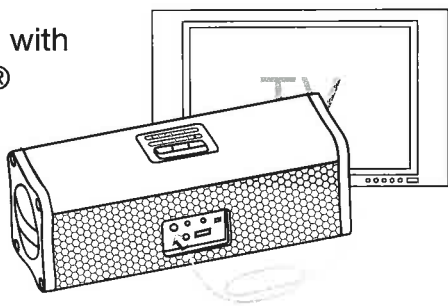

Radio Tuning and Connection:

Before using the Radio feature of the Concert to Go, make sure that you have properly connected the included AM & FM antenna's.

1. Press the FUNCTION button to select the desired Radio band (AM or FM).
2. Use the UP or DOWN buttons to tune the Radio to the desired Radio station.
3. To auto-scan to the next Radio station with clear reception, press and hold either UP or DOWN for approximately 1 second.
4. To increase/decrease the frequency by 0.1MHz/10kHz, press and release the UP/DOWN button.

Memory Feature:

While in AM or FM mode, press the MEMORY button located on the wireless remote control, the radio will search for the next clear channels and save them automatically, the radio will then return to the 1st saved channel once the search is complete.